


Airflex® WCS Component Parts

Section D

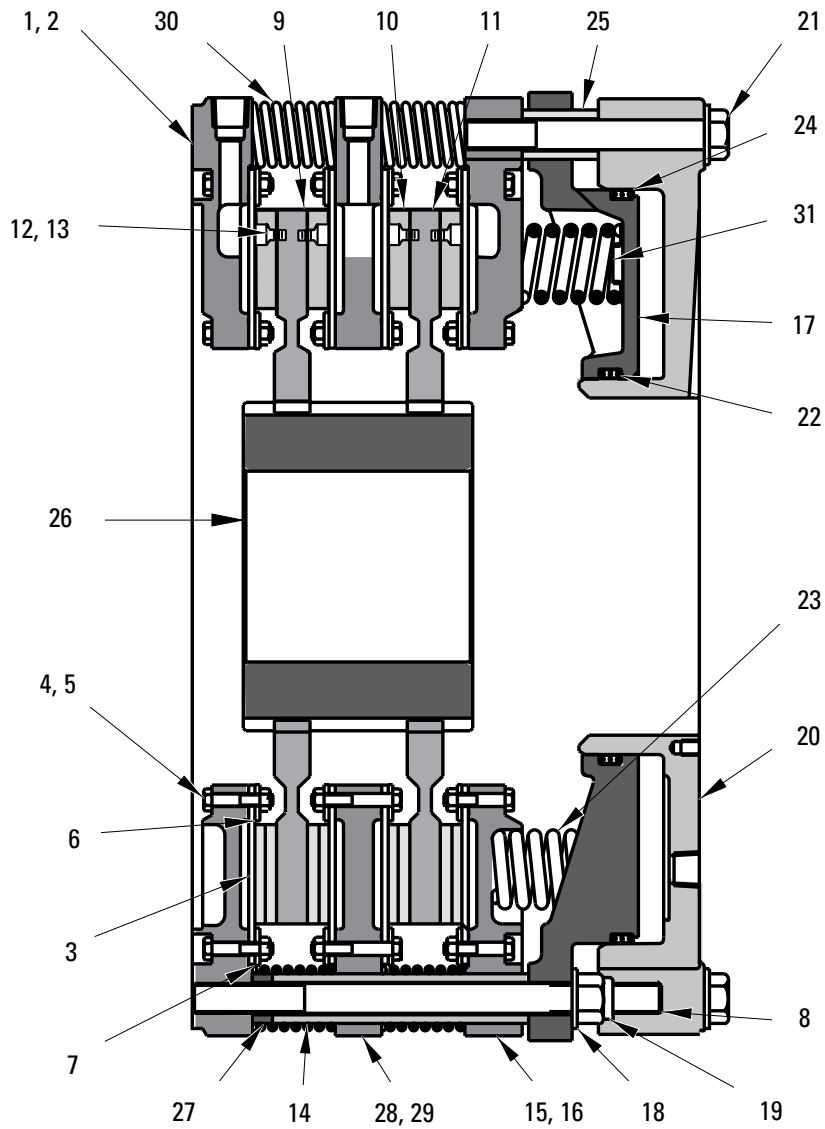

Item	Description
1	Mounting Flange Sub-Assembly
2	Mounting Flange
3	Wear Plate
4	Hex Head Screw
5	Locknut
6	Inner Support Ring
7	Outer Support Ring
8	Stud
9	Friction Disc Sub-Assembly
10	Friction Disc
11	Friction Disc Core
12	Flat Head Screw
14	Clamp Tube
15	Pressure Plate Sub-Assembly
16	Pressure Plate

Item	Description
17	Spring Housing
18	Flat Washer
19	Locknut
20	Cylinder
21	Hex Head Screw
22	Inner Seal
23	Spring
24	Outer Seal
25	Spacer Tube
26	Gear
27	Wear Spacer
28	Reaction Plate Sub-Assembly
29	Reaction Plate
30	Release Spring
31	Spring Retainer